


There are seven different pedal angle position, each with 3.75° increment. They covering the total range of 22.5°, from -15° to +7,5°. The angle adjustment procedure is the same for all three pedal. Usually the pedal angle depends on driver's sitting height. The higher the sitting position, the pedal is in more backward position.

**MAXIMUM BACKWARD POSITION**

**MAXIMUM FORWARD POSITION**

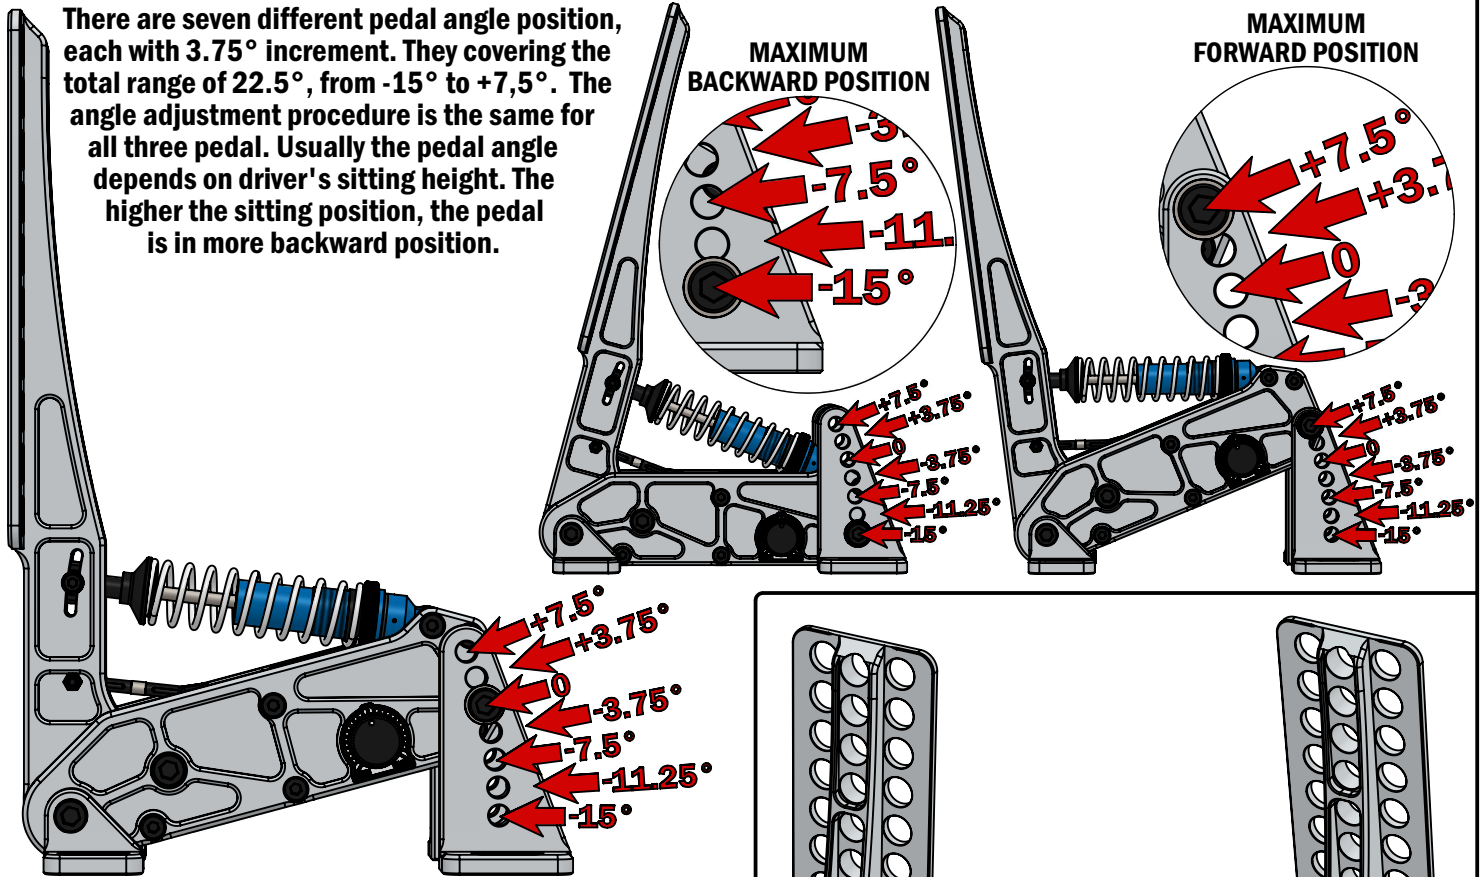

Use 5mm Hex wrench for this step  
We recommend to adjust pedal angle after mounting it the to the baseplate.

**STEP 3  
ADJUST THE PEDAL  
TO THE DESIRED  
POSITION.**

**STEP 1  
LOOSEN BOTH  
SIDE SCREWS.**

**STEP 4  
ADD SIDE  
WASHER AND  
SCREW THEN  
TIGHTEN BOTH  
SCREWS.**

**STEP 2  
REMOVE BOTH  
SCREW AND WASHER.**

**STEP 5  
TIGHTEN BOTH  
SIDE SCREWS.**

